




INSPIRE HARDWARE®

DEMI LUNE, DOOR HANDLES 6"


TECH SPEC

SPECIFICATIONS

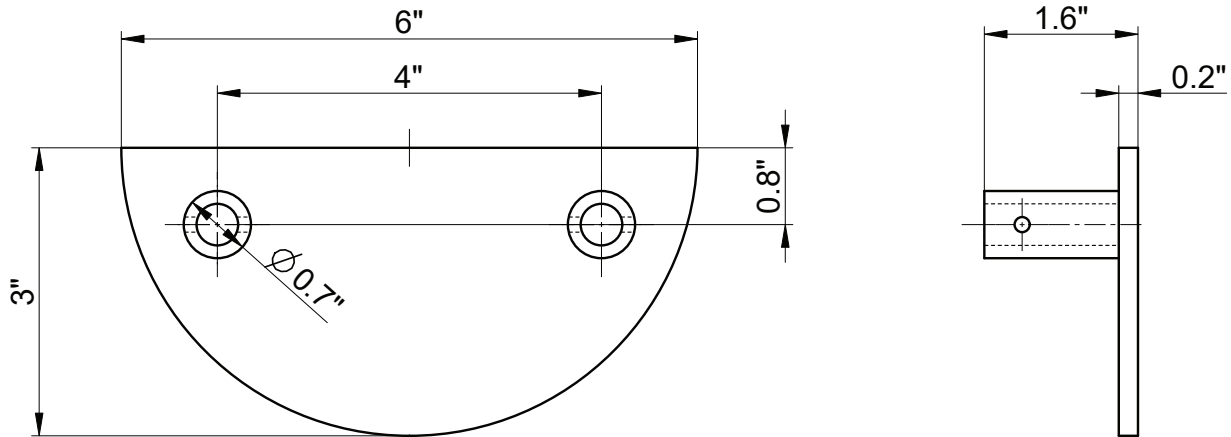

SCALE 1:2

THIS HANDLE COMES IN PAIRS ONLY. FASTENERS ALSO INCLUDED.

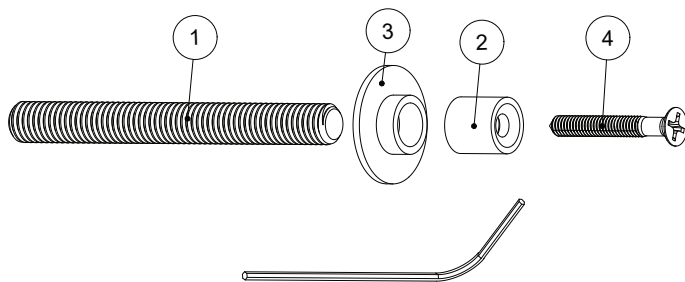

This product comes with fitted Allen wrench and joiner pieces below:

1. 2x Unheaded screw rods
2. 4x Brass housings
3. 4x Plastic washer inserts
(optional when installing on glass)
4. 4x Wood screws

CARE INSTRUCTIONS

Wipe with a damp cloth and avoid using any chemicals.




INSPIRE HARDWARE®

DEMI LUNE, DOOR HANDLES 6" TECH SPEC


INSTALLATION INSTRUCTIONS FOR TWO HANDLES PER DOOR

1 Unpack the Door Handle

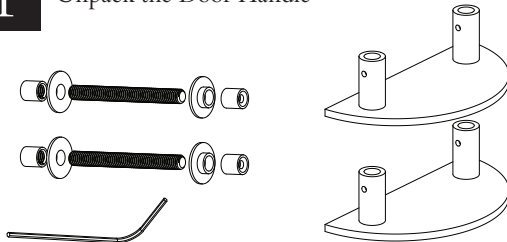


For this particular type of installation you need to utilize all the parts that are shown: 2x handles, 2x screw rods, 4x plastic washer inserts, 4x brass housings and Allen Wrench.

2 Using an angle grinder, cut the unheaded screw to size if necessary, based on the thickness of your door.

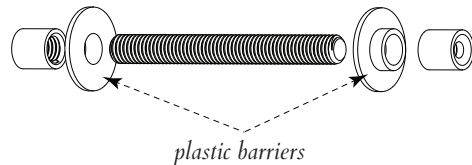


Don't use the plastic barriers if installing on wood. Leave them in place if installing on glass.

3 Loosen the Screws

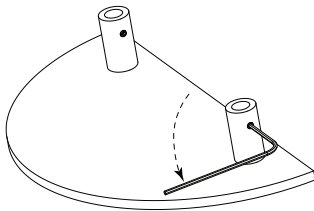


Use the Allen wrench to loosen the screws on the legs to prepare for the joiner piece insertion.

4 Insert the Joiner Pieces

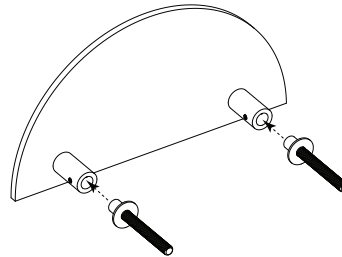


Slide the joiner pieces into the holes of each leg, on one handle, adjusting as needed for the correct depth. Tighten.

5 Mounting the handles

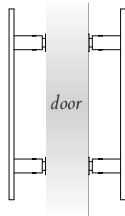

Mount the handle with the joiner pieces onto the door, and then assemble the other joiner parts and the handle on the opposite side.

6 Secure and Test the Handle

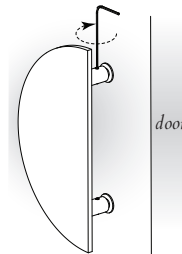

Tighten the screws to secure the joiner pieces and legs firmly, then test the door handle to ensure it is securely attached.




INSPIRE HARDWARE®

DEMI LUNE, DOOR HANDLES 6" TECH SPEC

INSTALLATION INSTRUCTIONS FOR ONE HANDLE PER DOOR

1

Unpack the Door Handle

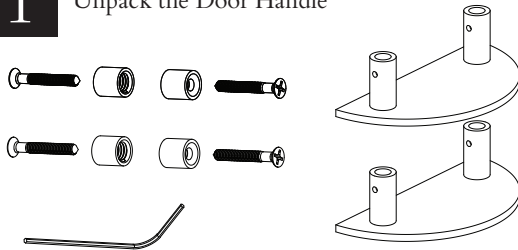

For this particular type of installation you need to utilize all the parts that are shown: 2x handles, 4x brass housings, 4x wood screws and Allen Wrench.

2


Screw wood screws



Screw the wood screw through the brass housing directly into the door, in the right position previously measured correctly.

3


Loosen the Screws

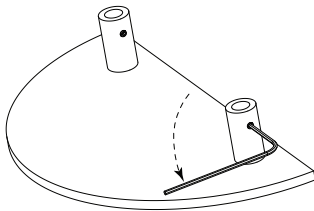

Use the Allen wrench to loosen the screws on the legs to prepare for the mounting on brass housings.

4


Mounting handle on the door

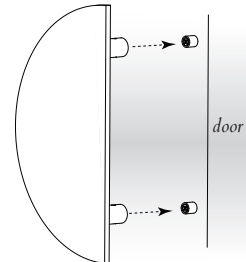

Slide the brass housings into the holes of each leg, on one handle, adjusting as needed for the correct depth.

5


Secure the handle

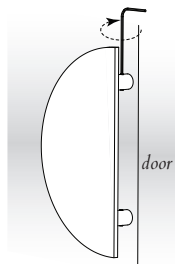

Tighten the screws to secure the joiner pieces and legs firmly.

6

Test the Handle

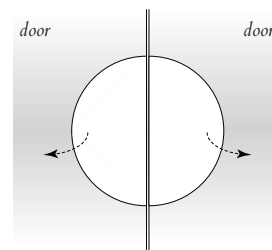

Test the door handles to ensure they are securely attached.