




INSPIRE HARDWARE®

RAIL, APPLIANCE PULLS - FULL GROOVES

TECH SPEC

DIMENSIONS

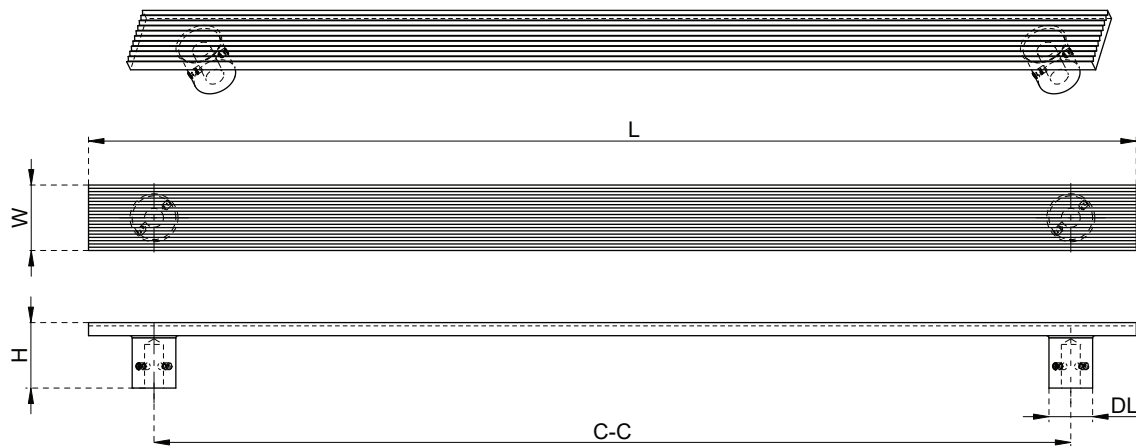


VARIANTS

Variant	L	C-C	W	H	DL
24	24	21	1.5	1.5	1

L - Length C-C - Center to Center W - Width H - Height DL - Diameter of Leg
All dimensions are in inches

THIS PRODUCT SELLS AS A SINGLE PULL. FASTENERS ALSO INCLUDED.

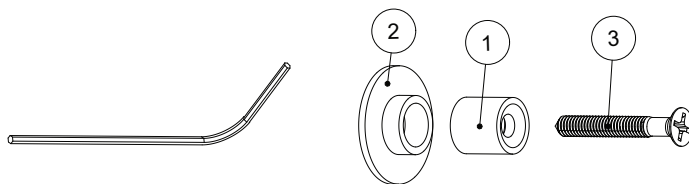

This product comes with fitted Allen wrench and joiner pieces below:

1. 2x Brass housings
2. 2x Plastic washer inserts
(optional when installing on glass)
3. 2x Wood screws M6x60

CARE INSTRUCTIONS

Wipe with a damp cloth and avoid using any chemicals.




INSPIRE HARDWARE®

RAIL, APPLIANCE PULLS - FULL GROOVES

TECH SPEC

INSTALLATION INSTRUCTIONS FOR ONE HANDLE PER DOOR

1 Unpack the Pull

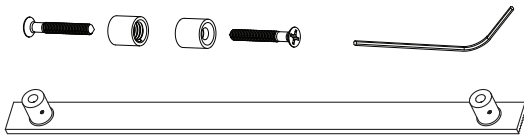


For this particular type of installation you need to utilize all the parts that are shown: 1x pull, 2x brass housings, 2x wood screws and Allen Wrench.

2 Screw wood screws




Screw the wood screw through the brass housing directly into the door, in the right position previously measured correctly.

3 Loosen the Screws

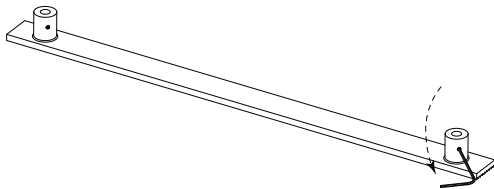


Use the Allen wrench to loosen the screws on the legs to prepare for the mounting on brass housings.

4 Mounting handle on the door

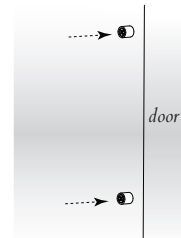


Slide the brass housings into the holes of each leg, on one handle, adjusting as needed for the correct depth.

5 Secure the handle

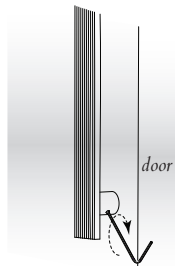

Tighten the screws to secure the joiner pieces and legs firmly.

6 Test the Handle

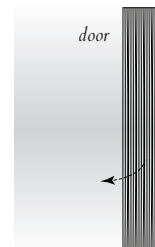

Test the door handles to ensure they are securely attached.